


NX Installing a Dongle License

NX Dongle licences are locked to the five digit dongle number programmed on the device and printed on the dongle casing.


These licences do not contain a SERVER or VENDOR line at the top of the file.

Steps to install:

1. Plug the dongle into a USB port
2. Download and install the dongle driver:
3. https://download.industrysoftware.automation.siemens.com/download-n.php/siemens_plm_licensing/product_updates/Drivers/win/SentinelSystemDriverInstaller7.5.7.exe.zip
4. Create a directory on your local drive similar to C:\LICENCE
5. Move the licence file into this folder and rename to licence.lic or similar.
6. Launch the Siemens Licence Tool

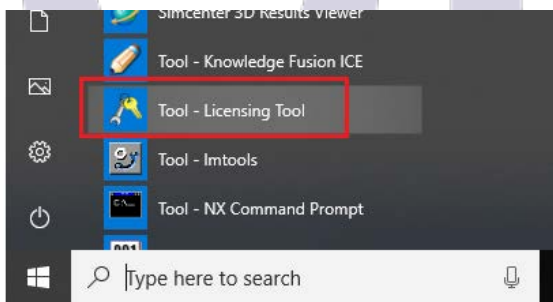

7. Select the **Environment Settings** section
8. Edit the path to the licence file to match the location of the licence.

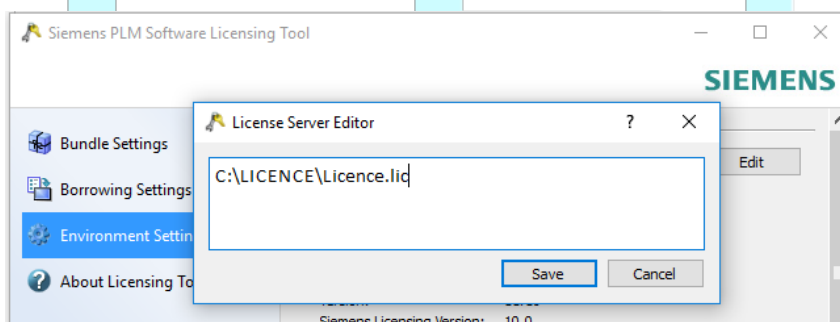

9. Launch NX